

# SCHOLAR™

Digital Talking  
Book Player



*Telex has designed and built Talking Book Players for the last 30 years. We are proud of our commitment to the blind/dyslexic market, and the durable, easy to use players that we manufacture. We have just expanded our talking book player line to include Scholar™ our first Digital Talking Book Player.*

*Designed for people who have a visual impairment or learning disability, the smallest DAISY CD Player in the industry also accepts standard CDs and MP3 CDs. Primary controls are easily identified by their larger size and tactile rubber construction, while secondary controls are smaller and feature a chrome finish. The player will provide instant access to specific page numbers and chapters in the DAISY structure, and includes a full numeric keypad with bookmarking feature. An LCD screen displays disc details for "at a glance" teacher monitoring, and lightweight headphones are included. See reverse side for complete details.*

**TELEX®**

**Features:**

- Industry's smallest and most affordable DAISY CD player
- Player is compatible with DAISY CDs, standard CDs, and MP3 CDs (automatic format detection)
- Designed for blind/dyslexic users of all ages, as well as those with physical disabilities
- Primary controls: volume, variable speed, play, rewind, fast forward, pause, stop, and undo/redo
- Secondary controls: mark, go to, bookmark, set, and page
- LCD screen displays disc details (i.e. teacher can walk by and see what page the student is on)
- Player is designed to provide instant access to specific page numbers and chapters in the DAISY structure
- A USB interface anticipates upgrades and future products
- Also operates with four AA batteries for hours of portable reading enjoyment
- Sturdy, impact resistant case features snap lock clamshell design
- Skip protection allows for smooth, uninterrupted reading
- Battery pack is located inside the clamshell, to prevent battery door from popping open
- Lightweight headphones are included, and also includes a line out for connection to external speakers if desired
- AC wall adapter is included

**Product**                      **Catalog Number**  
Scholar                        301267-XXX



TELEX COMMUNICATIONS, INC.  
12000 Portland Avenue South, Burnsville, MN 55337  
Phone: 800-828-6107, ext 7498, 952-887-7498  
Fax: 952-887-5595  
E-mail: duplication@telex.com  
Web: www.telex.com/duplication

Telex designed its Scholar Digital Talking Book Player for individuals who qualify for any Blind and Physically Handicapped Talking Book Program worldwide.

Contact Telex or [www.daisy.org](http://www.daisy.org) for information on organizations that provide recorded books on CD (using the DAISY standard) to qualified users.

In addition to playing DAISY formatted CDs, Scholar will also play standard audio CDs, and MP3 CDs.

Specifications	
<b>Dimensions:</b>	5.25"(133.4mm)W x 6.0"(152.4 mm)L x 1.59"(40.4 mm)H
<b>Weight:</b>	0.65 lb (0.3 Kg)
<b>Batteries:</b>	4 "AA" Batteries
<b>DC Input:</b>	4.5 Vac, 500 mA
<b>CD Player Formats:</b>	CD-DA CD-ROM with MP3 files, capable of MP3 compression rates of 32 kbps to 256 kbps constant bit-rate playback (mono or stereo) CD-ROM with DAISY 2.0 to DAISY 2.02

Scholar™	
<b>1 Play/Stop</b>	Press to Power the Unit and to Begin Playback/Press to Stop Playback/Hold down with the Power on to Shut off the Unit
<b>2 Skip/Search Reverse</b>	Press Momentarily to Play the Previous Tracks or Hold to Review Audio Backward
<b>3 Page</b>	Begins Page Number Entry
<b>4 Up Arrow</b>	Navigate to a Higher Book Level (i.e. from Section Level to Main Chapter Level)
<b>5 Volume Up/Down</b>	Increase or Decrease Volume to Headphones
<b>6 DC Input</b>	Jack for DC Input
<b>7 Line Output</b>	Use Jack to Output to External Audio Devices like Speakers or an Amplifier
<b>8 USB Interface</b>	Used for Firmware/Security Upgrades/Product Accessories
<b>9 Undo/Redo</b>	Press to Return to the Previous Navigation Point/Press Again to Return to the Navigation Point Entered
<b>10 Variable Speed</b>	Increases or Decreases Playing Speed
<b>11 Headphone Jack</b>	Jack for Headphones
<b>12 Bookmark</b>	Press to Begin a "Set" or "Go To" Bookmark Entry
<b>13 Hold Switch</b>	In "Hold" Prevents Unit from Accidental Power when Unit is Off or Interrupting Playback when Unit is Playing
<b>14 Skip/Search Forward</b>	Press Momentarily to Play the Next Track/Hold to Preview Audio Forward
<b>15 Set</b>	Press to End Numbered Bookmark Entry
<b>16 Door Clamp</b>	Allows Access to the CD and the Internal Battery Compartments
<b>17 Numeric Key Pad</b>	
<b>18 Down Arrow</b>	Navigate to a Lower Book Level (i.e. from Main Chapter Level to Section Level)
<b>19 Go To</b>	Press to End Sequence of Page or Bookmark Entry